



产品配色与工艺说明图

Product Colour, Material & Finishing Specifications

Product Model 产品型号	AZCS-F001	Brand 品牌	中性	Job No. 图档编码	
Product Type 产品类	无线充电器说明书	Description 描述	/	Revision 版本号	1.1
Dimension 尺寸	90*65mm	Original Designer 原设计师	叶少敏	Date 日期	2016.01.04
Scale 比例	1:1	Technology 工艺	128g哑粉纸 双面四色印刷	Verifying 审核	/
备注					


正面

快速无线充电器

用户手册

用户手册


感谢您购买本产品，本产品是一款智能手机无线充电器，能让您轻松体验数码产品的无限乐趣。
使用本产品前请认真阅读本手册并妥善保存，以备查阅。

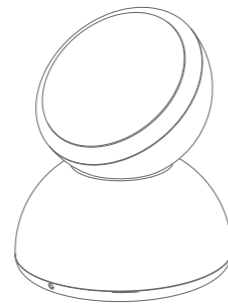

规格参数

输入电压：DC5V,2A DC9V,1.8A 接收距离：4~10mm
工作频率：110~205KHz 电力转换：≥72%
直径：76.5mm 产品重量：128g
高：91mm


连接适配器充电

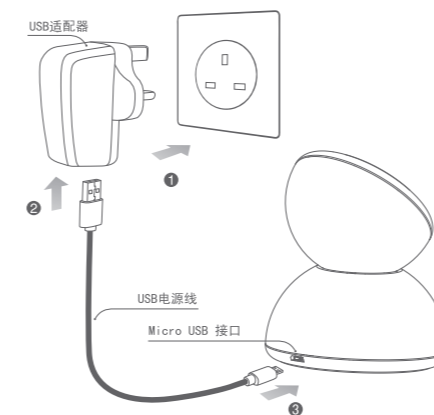

- ① 将电源适配器插在插座上。
- ② USB电源线一端连接适配器，一端连接充电板。
- ③ 充电板指示灯自动点亮为绿色。

注：只有QC2.0标准的电源适配器才能支持本产品的快充功能，电源适配器须另外购买。

手机正确充电方式

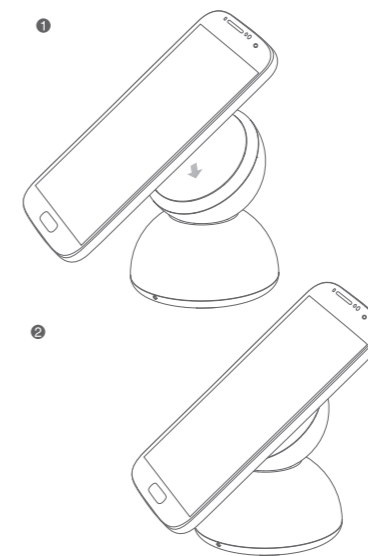

- ① 确认充电板指示灯为绿色,处于连接电源待机状态。
- ② 将带有无线充电功能的手机正确放置于在发射板上，指示灯由绿灯变为蓝灯表示开始充电，移除手机，指示灯变成绿色，表示进入待机模式。

注意事项

- 1、请勿挤压或碰撞。
- 2、请勿自行拆卸或投入火中、水中，避免造成短路漏电。
- 3、请勿在严重高温、潮湿或腐蚀性环境下使用无线充电器，避免损坏电路出现漏电现象。
- 4、请勿与带磁条或者芯片的磁卡（身份证、银行卡等）放置太近，避免造成磁卡失效。
- 5、请保持植入医疗设备（心脏起搏器、植入性耳蜗等）与无线充电器之间的距离至少为20cm，以避免对医疗设备造成潜在干扰。
- 6、应看管好儿童，以确保他们不将无线充电器当成玩具来玩，以避免不必要的意外。

说明书涉及图片均为示意图，最终产品以实物为准。
内含：无线充电器、150cm电源线、产品说明书


反面

Fast Wireless Charger

User Manual

User Manual


Thanks for choosing us!
This is a smart phone wireless charger that allows you enjoy the fun of digital products easily.
Please kindly read the user manual before using and keep it for future reference.

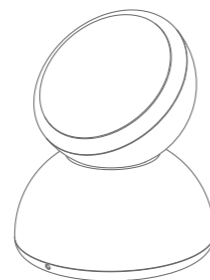

Specification:

Input : DC5V,2.0A DC9V,1.8A Charging distance : 4~10mm
Frequency : 110~205KHZ Conversion : ≥72%
Diameter : 76.5mm NW :128g
Thickness : 91mm


Connect to Power Adapter

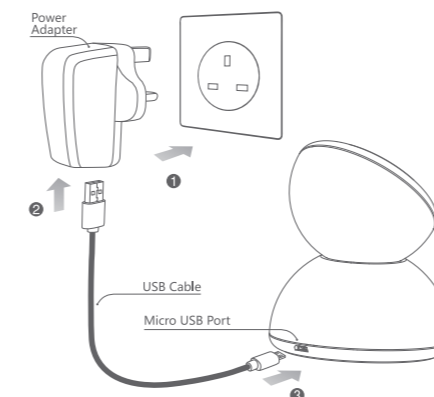

- ① Connect the power adapter to socket.
- ② Connect adapter to the USB 2.0 interface, the other Micro USB to pad.
- ③ Standby LED light turn on green.

Note: Only QC 2.0 standard power adapter support this product's quick charge function. You need to buy power adapter separately.

Charging Mode

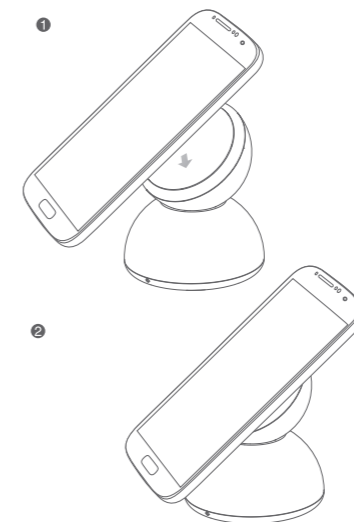

- ① Make sure the charging pad indicator light turn on green, under standby status.

- ② Place the Qi enabled phone on the wireless charging pad, phone start charging when LED indicator light change from green to blue. Remove the phone, green indicator light flash means turn to standby mode.

Notes:

1. Do not squeeze or collisions.
2. Do not disassemble or throw into fire or water, to avoid causing a short circuit leakage.
3. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
4. Do not place too close with magnetic stripe or chip card (ID card, bank cards, etc.) to avoid magnetic failure.
5. Please keep the distance at least 20cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
6. To take care of the children, to ensure that they won't play the wireless charger as a toy, to avoid unnecessary accidents.

The involved images are sketch maps,the final product as per the material subjects.

Includes: wireless charger, 150cm power cable, user's manual.